



# Super UT 14.100 Post Fastener (12mmx278mm)



## SPECIFICATION

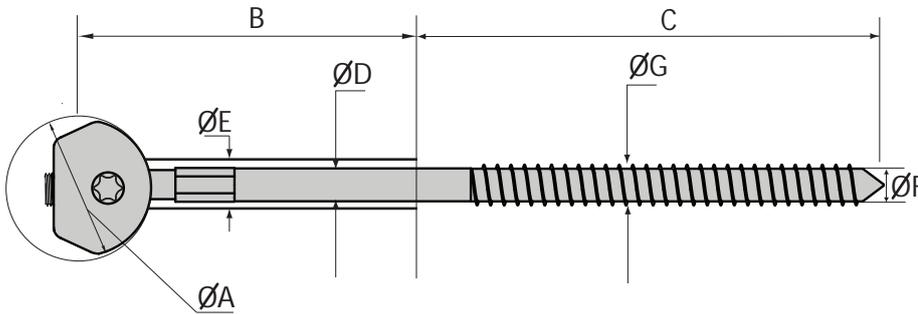


### SHAFT CENTRE CALCULATION

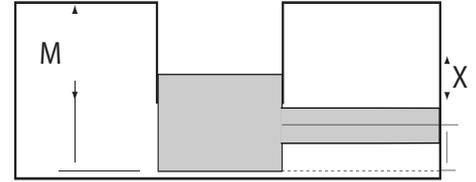

M = Minimum Bore Depth 28mm (1 7/64 inches)  
X = Shaft Centre 14mm (9/16 inches)

## Measurements

	Millimitres	Inches
A	35	1 <sup>3</sup> / <sub>8</sub>
B	125	4 <sup>29</sup> / <sub>32</sub>
C	143	5 <sup>41</sup> / <sub>64</sub>
D	11	7/ <sub>16</sub>
E	13	+/- 33/ <sub>64</sub>
F	+/- 10	13/ <sub>32</sub>
G	13.5	17/ <sub>32</sub>

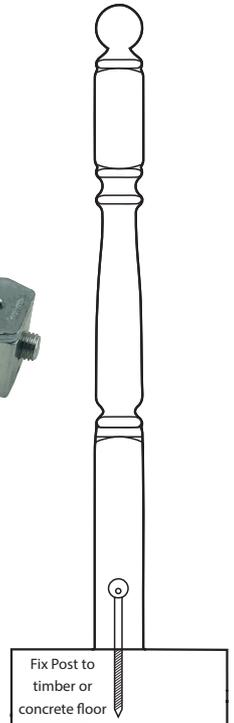

Use a chemical anchor to secure into concrete, the hole must be slightly larger than the screw shaft.

